

Connecting Push-buttons to DB15TB GPIO adaptor on BrightSign HD120 or HD1020 media player.

Connect the DB15TB adaptor to the GPIO port of the HD120 player. Secure with the 2 screws provided.

Wire the push-buttons (normally-open contact) to the relevant screw connections on the DB15TB adaptor.

DB15TB screw connections	Signal name
0V	Common GND (black)
7	Push-button 8 (red)
6	Push-button 7 (red)
5	Push-button 6 (red)
4	Push-button 5 (red)
3	Push-button 4 (red)
2	Push-button 3 (red)
1	Push-button 2 (red)
0	Push-button 1 (red)
3V	